


(yogisfestoh)

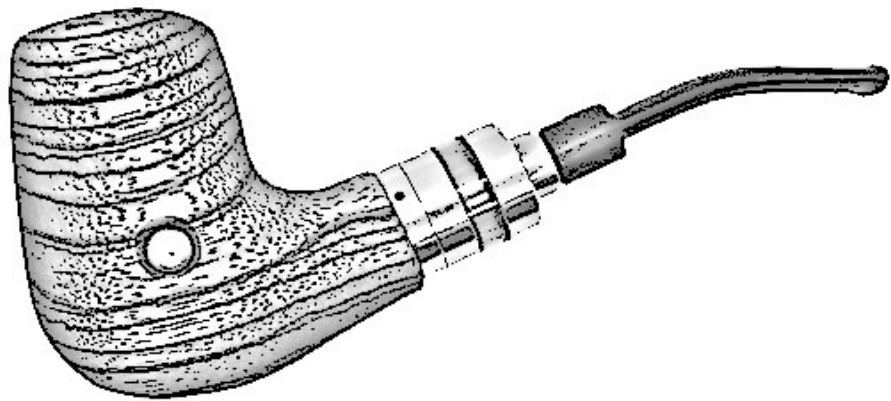

Yogs E-PIPE nex KLASSIK

Manual

Contents

1. Yogs E-PIPE nex KLASSIK

2. Features

3. Recommendations Battery

4. Notes

5. Warranty and disclaimer

6. Maintenance (Wood)

7. Information for use

01 Yogs E-PIPE nex KLASSIK

The E-PIPE nex is an electronically unregulated battery mod for use with many atomizers of different sizes and diameters (510 connection 22mm + transition).

It is powered by a single Li-Ion battery size 18500 (cap without spring, 18650 cap sold seperately).

The E-Pipe nex has a 510 centre pole which is coated with hard gold. Electrically, the pipe allows a maximum output power of approxim. 80W (up to a max. of 20A at the coil) depending on the OHM number, see power diagram. The E-Pipe is controlled by a dual touch sensor.



The pipe fires only when the touch sensor is touched on the side and also the cap. (or ground (-)).

The lowest permissible winding amounts to 0.2 Ohm! This must not be undercut! Damage to the unit due to noncompliance is not covered by warranty!!

Also look to the recommendations for the battery!

02 Features

- Power selectable via the number of Ohms of the winding with a Li-Ion battery
- Final battery discharge Voltage of 2.6 – 2.8V (depending on components).
- up to 20A output current
- 0.2 Ohm with 18650 batteries (cap sold seperately)
- 0.5 Ohm with 18500 batteries (cap included)
- mod (unregulated)
- circuit protection
- Reverse polarity protection
- discharge protection
- Pipe 100% handmade
- wood oiled and waxed
- 510 Plus-Pin is hard gold plated several times
- available in 3 different kinds of wood
- sandblasted for more wood feeling
- each E-Pipe is unique
- very comfortable touch
- Made in Germany
- 1 year warranty on electronics
- expandable to 18650 batteries with 18650 cap (not included)

03 Battery recommendation

18650:

For maximum power we recommend batteries from 20A + (without nipple)

18500:

For maximum power we recommend batteries from 15A (without nipple)

Under no circumstances your winding should be below 0.2 Ohm or exceed the ampere limit of the battery you are using!!! The power table will be helpful to this.

04 Notes

Battery:

Always use batteries with high up to very high current carrying capacity (even at the expense of capacity, unless you are vaping with outputs <20W). Please avoid „No-Name“ Products. Always Insert the battery into the E-Pipe nex with the positive terminal pointing downwards. Use batteries without a nipple.

Electric/electronic cigarettes:

Electric cigarettes are not healthy. However, so far all studies indicate that they are far less harmful than tobacco cigarettes. Electric cigarettes are a good alternative to tobacco products, but are only limited suitable for smoking cessation. Electric cigarettes are not suitable for children and adolescents under the age of 18, non-smokers, pregnant women, people with allergies to nicotine, propylene glycol and people with cardiovascular disease. Sale to persons under the age of 18 is prohibited.

Rechargeable battery/battery disposal:

You have purchased a device with a rechargeable battery. Batteries and rechargeable batteries are not allowed to be disposed of in household waste at the end of their service life. The owner is obliged to dispose of ALL kinds of batteries at appropriate collection points.

Battery disposal:

The symbol below (bin with underscore) indicates to the owner that this appliance should not to be disposed of with household waste. To reduce environmental impact in accordance with WEEE (electrical/electronic equipment for disposal), please take the unit to appropriate collection points for recycling. Thank you!

Important!!! Switch off the battery pack!

When the E-PIPE nex KLASSIK is not in use, please loosen the upper battery cover (18500 or 18650) so that there is no battery contact. This secures the battery carrier.

05 Warranty and disclaimer

Guarantee: All devices manufactured by Yogs-Pfeifen undergo extensive optical and electrical tests before delivery. Should the E-Pipe nex nevertheless show a defect or a comprehensible faulty behaviour after purchase, then it is to be treated as a warranty case. Yogs-Pfeifen will accept justified claims up to 1 year after purchase. For this purpose, it is necessary to prove the date of purchase by the bill of purchase. The guarantee refers exclusively to the fault-free function of the hard-and software when used properly, whereby faults that do not affect the basic functionality are not covered by guarantee. Also not covered by the warranty are faults caused by improper handling and soiling, see below! In case of a malfunction covered by the warranty, the customer is free to send the device to Yogs-Pfeifen and to request a free repair or rectification of the fault. The customer is obliged to check the device for scratches and marks before using it the first time. The company Yogs-Pfeifen cannot accept the claim of optical defects after first use. If the customer is unsure whether a defect or malfunction is covered by the warranty, please contact us before returning the device. If a faulty returned unit is not covered under the terms of the warranty, the customer will be informed and a quotation will be provided, before any repairs will start! The shipping-costs of a unit from the customer to Yogs-Pfeifen is not covered by warranty under any circumstances!

Our email-address:
Yog@Yogs-Pfeifen.de

Devices should be sent to:
Yogs-Pfeifen
Christoph Mahler
Postgasse 1
D-73479 Ellwangen, Germany

Not covered by the warranty are:

- Defects and flaws due to improper handling, contamination by liquid, dust, etc., mechanical damage, opening the device (except change of battery), exposure to temperatures of $>45^{\circ}\text{C}$ and $<0^{\circ}\text{C}$
- scratches and marks caused by normal use and carrying
- damage caused by faulty or incorrect batteries

The warranty is void:

- if the unit is dropped in the floor (*)
- if the unit is Opener
- when attempting to repair a unit

(*) Please do not continue to use the unit if it has fallen down on the floor! The electronics may be damaged! Contact Yogs-Pfeifen!

06 Care (Wood)

The E-PIPE nex KLASSIK is available in different versions. Here are 2 care instructions on how to proceed with real-wood-mods:

Note: The wood was oiled and polished with Carnauba-Wax before Shipping. This layer can/will get lost with frequent use.

Possibility 1 (quick care): Remove the atomizer and the battery-cover. Put a small drop of olive-oil (household) on a cotton cloth an gently rub the pipe with it. Please be careful not to get any oil into the 510er or the battery compartment! Too much oil can and will affect the Dual Touch Sensor!

Possibility 2 (intensive care, only for extreme patina): Remove the atomizer and the battery-cover. A 600-1000 abrasive fleece is needed. Cover all metal parts with tape, preferably transparent tape (be careful because the glue will stick back!). Lay the pipe down on a towel and carefully remove the patina with the fleece. Then gently rub the pipe with a cotton cloth and a small drop of olive-oil. Please proceed carefully, so that no oil gets into the 510er or the battery compartment!

07 Package Leaflet

1. General information:
 - The sale and use of e-cigarettes is prohibited for persons under the age of 18.
 - For handling and specifications, please refer to the instructions of use (yogs-pfeifen.de)
2. Handling of lithium-ion batteries (Li-Ion):
 - Li-Ion batteries must never be short – circuited.
 - Only use suitable containers for transport.
 - Never throw Li-Ion batteries into liquids or fire.
 - Do not expose Li-Ion batteries to extreme temperatures.
 - Never use damaged Li-Ion batteries or batteries whose insulator is damaged.
 - Only use suitable chargers.
 - Never charge Li-Ion batteries unattended.
 - Only use batteries of the correct type and with sufficient load capacity.
 - Dispose of Li-Ion batteries only at appropriate collection points.
3. Instruction for use and storage:
 - Always keep e-cigarettes and liquids out of the reach of children and pets.
 - Only use compatible refill systems, connection types and spare parts
 - Operate your e-cigarette only in the recommended power ranges.
 - Never open a device.
4. Contraindication:
 - We do not have any studies on our products that would indicate contraindications.
 - However, we recommend in case of:
 - Previous severe or moderate illness
 - Chronic complaints
 - Known allergies to ingredients (see refill container)
 - Taking strong medication

Consult your doctor before using the product for the first time.
5. Warnings for vulnerable consumer groups:
 - The use and distribution of e-cigarettes and liquids to children and adolescents is prohibited.
 - The use of e-cigarettes and liquids by non-smokers is not recommended.
 - The use of e-cigarettes and liquids during pregnancy and breastfeeding is not recommended.
6. Statement on possible adverse health effects:
 - We are not aware of any studies on our products that would indicate adverse health effects.
 - However, this does not mean that adverse health effects can be excluded. In this respect, please also note our information on contraindications, the warnings for vulnerable consumer groups and the information on the addictive effect of nicotine.
7. Information on addictive effect:
 - If you use liquid containing nicotine in your e-cigarette, please note the following information:
„Nicotine is a very addictive substance“.
8. Toxicological data:
 - This device does not contain any harmful substances at the time of delivery. However, if you use liquid containing nicotine in your e-cigarette, please also note „6.“! Information to addicted effects.
9. Disposal:

Electrical and electronic equipment (old equipment) must not be disposed of in household waste. Consumers are legally obliged to take it to suitable collection points.

Contact:

Yogs-Pfeifen
Postgasse 1
D-73479 Ellwangen Germany
Tel.: +49 7961 9599920
Email: Yog@Yogs-Pfeifen.de
Web: www.yogs-pfeifen.de

